



S05-ST User's Manual (ZigBee HA Profile)

Ver. 1.04

Copyright 2016 Nietzsche Enterprise Co., Ltd. All rights reserved

Nietzsche Enterprise reserves the right to make changes and improvements to its products without notice.

Contact Information: Email: zigbeenhr@shop, Website: www.shop-wifi.com/wireless-sensors

Content


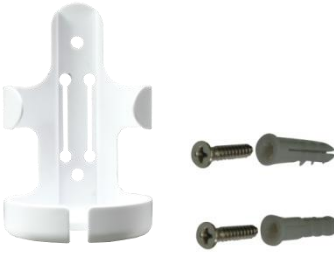

| | |
|-----------------------------------------------------|---|
| 1) Package Content and S05-ST Views..... | 2 |
| 2) Installing Mounting for S05-ST..... | 3 |
| 3) Powering On/Off the S05-ST..... | 4 |
| 4) Setting Transmission Interval for S05-ST | 5 |
| 5) Joining S05-ST to the Network..... | 6 |
| 6) Removing S05-ST from the Parent's Network | 6 |
| 7) Calibrating S05-ST | 7 |
| 8) S05-ST LED Status / S1 Link Switch Actions | 7 |
| 9) ZigBee Reset..... | 8 |
| 10) Product Specifications | 8 |

Congratulations for choosing NHR's PT1000 temperature sensor using ZigBee wireless transmission technology. This manual is designed to help set up and get the most from the sensor in a few short minutes.



Safety notice: Please read and follow the instructions before using this product

- To prevent electrical shock or fire, do not disassemble or expose the unit to liquids of any kind
- Only use attachments and / or accessories specified by the manufacturer

1 Package Content and S05-ST Views

| NHR S05-ST PT100 temperature sensor | Mounting fixtures (mounting cradle, 2 wall plugs, 2 screws) | 4 x AA batteries |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
|  |  |  |

If any of the above is missing please contact your supplier.
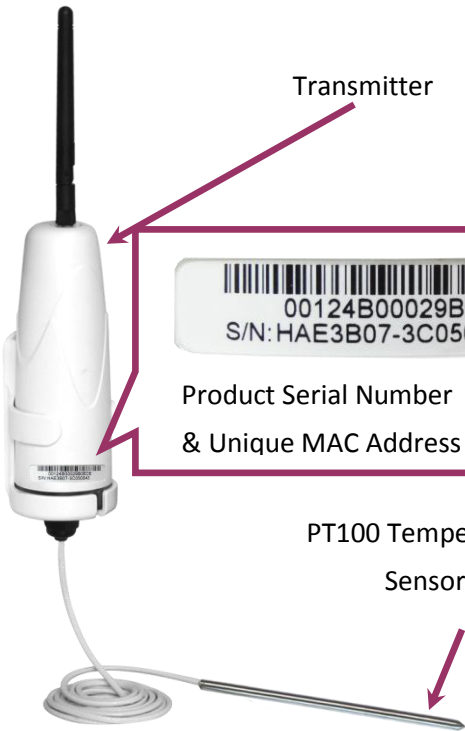
| Side | Base |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>Transmitter</p> <p>Product Serial Number & Unique MAC Address</p> <p>PT100 Temperature Sensor</p> |  <p>Internal</p> <p>Battery Compartment</p> <p>Link Switch</p> <p>Transmission Interval Setting Switches</p> <p>Status LED</p> <p>Calibration Screw</p> <p>Sensor Cable Connector</p> |

2 Installing Mounting for S05-ST

Requirements:

- Mounting fixtures
 - Drill with 5mm (0.2 inches) drill bit size (if using wall plugs) or 3.5mm (0.14 inches) drill bit size (if not using wall plugs)
 - Size 1 Phillips screwdriver
- a) Locate S05-ST with at least 15cm (approx. 6 inches) spacing on each side (except on mounting side) avoiding the following sources of interference: direct sunlight, air flow from vents, fans, doors, windows, heaters, sources of steam, oil vapor, etc.
- b) If necessary, pre-drill mounting holes using mounting cradle for alignment, then use appropriate drill bit to drill the holes – 5mm (approx. 0.2 inches) if using wall plugs or 3.5mm (approx. 0.14 inches) if not using wall plugs.
- c) If necessary, insert wall plugs into the 2 holes and use size 1 Phillips screwdriver to fasten the screws securing the mounting cradle. Note: pay careful attention to the orientation of the mounting cradle.
- d) Install and remove S05-ST by placing it into and lifting it out of the cradle:

Install -



Remove -




Important: To ensure IP66 waterproof and dust tight operations, both the base and the connector must be fully tightened (clockwise).

3 Powering On/Off the S05-ST

Requirements:

- 4 x AA batteries
- a) Twist the base counterclockwise to gain internal access to the transmitter, then pull the latch towards the hinge to open the battery compartment door:

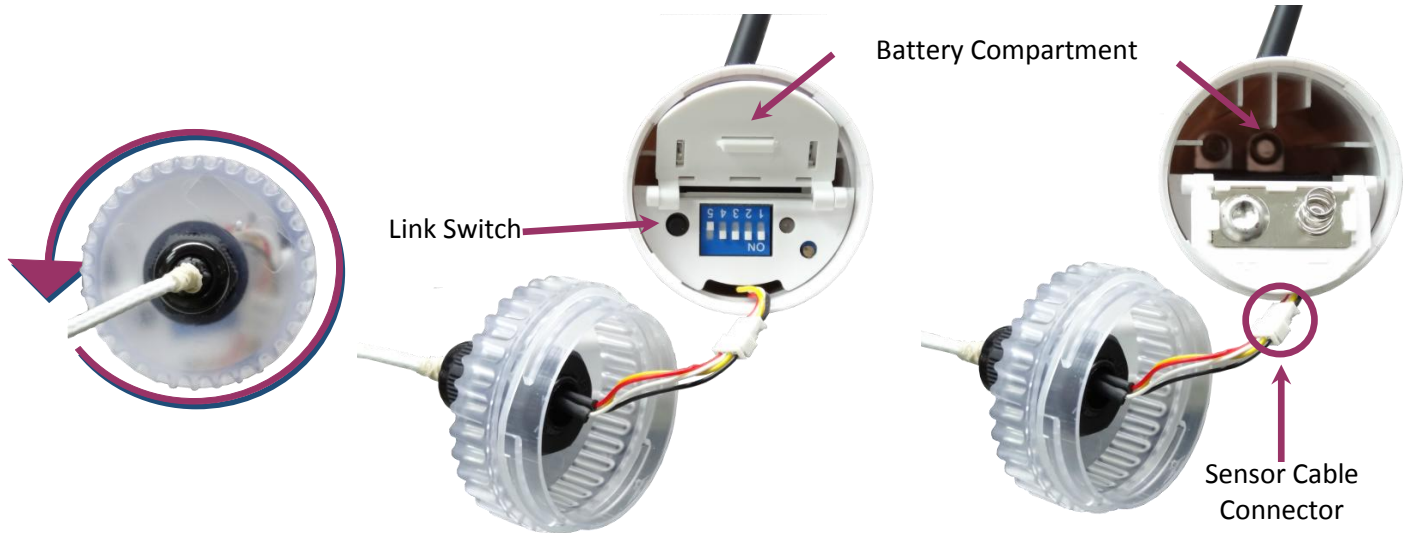

Note: When separating the base, be careful to ensure the sensor cable connector stays connected.

- b) Remove any existing batteries.
- c) Install 4 x AA batteries into the battery compartment ensuring correct polarity.
- d) Close the compartment door and push the latch away from the hinge to secure the door in place. Replace the base by twisting it clockwise into S05-ST until it is firmly secured to the transmitter.
- e) The status LED on S05-ST should start flashing to indicate its current state:

| Green LED | Status |
|---------------------------|--------------------------------------------------------------------|
| 1 flash per second | Ready to join a parent device |
| 1 flash every 60 seconds | Already joined a parent device and functioning normally |
| 2 flashes every 5 seconds | Already joined but unable find a parent device in the same network |















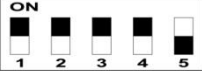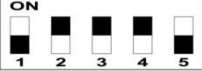









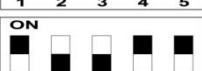
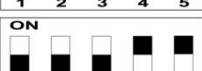






- f) To power off S05-ST, remove its batteries.

Recommendation: It is strongly recommended to install batteries into S05-ST **just before** joining to parent device as this will greatly improve battery life. For proper functioning of S05-ST and longer battery life, please install alkaline batteries from reputable suppliers.

Low battery power is indicated by the red LED flashing once every 15 seconds. Replace batteries immediately to prevent potential damage and ensure proper functioning of S05-ST.

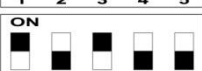4 Setting Transmission Interval for S05-ST

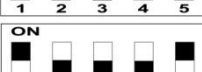- If necessary, remove the S05-ST from mounting cradle (see “Installing Mounting for S05-ST” section).
- Twist the base counterclockwise to gain internal access to the transmitter, being careful when separating the base to ensure the sensor cable connector stays connected.
- Set the transmission interval based on the following DIP switch positions:

| Transmit Interval | DIP Switch Setting | Transmit Interval | DIP Switch Setting |
|-------------------|-------------------------------------------------------------------------------------|-------------------|---------------------------------------------------------------------------------------|
| 1 Second |  | 1 Minute |  |
| 5 Seconds |  | 5 Minutes |  |
| 10 Seconds |  | 10 Minutes |  |
| 15 Seconds |  | 15 Minutes |  |
| 20 Seconds |  | 20 Minutes |  |
| 25 Seconds |  | 25 Minutes |  |
| 30 Seconds |  | 30 Minutes |  |
| 35 Seconds |  | 35 Minutes |  |
| 40 Seconds |  | 40 Minutes |  |
| 45 Seconds |  | 45 Minutes |  |
| 50 Seconds |  | 50 Minutes |  |
| 55 Seconds |  | 55 Minutes |  |
| 60 Seconds |  | 60 Minutes |  |
| 65 Seconds |  | 65 Minutes |  |
| 70 Seconds |  | 70 Minutes |  |
| 75 Seconds |  | 75 Minutes |  |

- Ensure that the S05-ST has joined a parent device (see “Joining S05-ST to the Network” section).

- e) Use software for reading information from coordinator or gateway device (see relevant device's manual) to confirm S05-ST transmissions are being received at the correct interval.
- f) Replace the base by twisting it clockwise until it is firmly secured to the transmitter.
- g) If necessary, replace S05-ST into mounting cradle (see "**Installing mounting for S05-ST**" section).

Transmission interval setting has been successfully configured.

Note: Transmission interval is read at power on, a power cycle is required to effect interval change.

5 Joining S05-ST to the Network

Requirements:

- Parent device, such as coordinator (eg. WZB-01USBC, WZB-02485C), gateway (eg. G07-W, WZB-05ET), or router (eg. WZB-01USBR, WZB-02485R)
 - Sharp pointed tool
- a) Ensure parent device is powered on (see relevant device's manual).
 - b) Power on S05-ST (see "**Powering On/Off the S05-ST**" section) ensuring it is in **Ready to Join** status (green LED flash once every second).
 - c) Enable **Permit Join** status on parent device (see relevant device's manual) and check S05-ST joined the parent device.
 - d) If S05-ST has successfully joined the parent device, the green LED should flash 3 times, then once every 60 seconds.

If S05-ST's green LED does not flash once every 60 seconds, then it has not successfully joined.

Repeat above steps until S05-ST has joined successfully. If S05-ST has still not joined after a few attempts, check it is within the operational range of 300m from the parent device and away from other 2.4GHz devices that might interfere with its operations.

If S05-ST has joined successfully, but is showing **Disconnected** status (green LED flashes twice every 5 seconds), then check parent device is correctly powered on. If the parent device is functioning correctly, S05-ST may be out of range or experiencing interference, additional router(s) may need to be added to ensure good connections.

6 Removing S05-ST from the Parent's Network

Requirements:

- Sharp pointed tool
- a) Ensure parent device (coordinator, gateway, or router) is powered on (see relevant device's manual).
 - b) If necessary, remove the S05-ST from mounting cradle (see "**Installing Mounting for S05-ST**" section).

- c) Ensure S05-ST is powered on (see “**Powering On/Off the S05-ST**” section) and has already joined the parent’s network (green LED flash once every 60 seconds).
- d) Twist the base counterclockwise to gain internal access to the transmitter, being careful when separating the base to ensure the sensor cable connector stays connected.
- e) Use a sharp pointed tool to apply 3 quick presses to the link switch on S05-ST, the red LED will flash rapidly for up to 30 seconds or until successful removal.
- f) If S05-ST has been successfully removed, the green LED should show **Ready to Join** status (flash once every second).

Note: Definition of **Removing** – S05-ST will no longer appear in the parent device’s wireless group list after removing S05-ST from the parent device’s network.

Recommendation: It is strongly recommended to remove the batteries immediately from S05-ST once it has been removed from the parent’s network as this will prevent damage and greatly improve battery life.

7 Calibrating S05-ST

Requirements:

- Reference temperature device
 - Size 4-5 slot / flat blade screwdriver
- a) Ensuring S05-ST is at room temperature ($\sim 20^{\circ}\text{C}$) and the reporting interval is 1s (see “**Setting Transmission Interval for S05-ST**” – DIP switch setting all set to ON).
 - b) Place PT100 temperature sensor next to reference temperature device’s sensing element, and allow the two to reach steady readings (may take a few minutes depending on previous state).
 - c) Turn calibration screw using slot / flat blade screwdriver until readings of S05-ST match reference.

8 S05-ST LED Status / S1 Link Switch Actions

The S05-ST LED can be seen through the translucent base. The table below shows the LED status for S05-ST:

| S05-ST LED | Status |
|-----------------------------------------|-------------------------------------------------------------------------------------------------|
| Green LED: 1 flash every second | Ready to Join – ready to join network of parent device (coordinator, gateway, or router) |
| Green LED: 3 flashes (one time) | Successfully Joined – joined network of parent device |
| Green LED: 1 flash every 60 seconds | Normal Operations – joined network of parent device and functioning normally |
| Green LED: 2 flashes every 5 seconds | Disconnected – joined network, but unable to find any parent device of the network |

| | |
|---------------------------------------------|------------------------------------------------------------------------------------|
| Red LED: Rapid flashing up to 30 seconds | Removing – being removed from the network of the parent device |
| Red LED: 1 flash every 15 seconds | Low Power – low battery power, replace batteries immediately |
| Green & Red LED: ON | ZigBee Reset – reset to factory default, remove all ZigBee network linkages |

The S05-ST power button / S1 link switch actions are summarized below:

| Operation | Power Button / S1 Link Switch Actions |
|----------------------------|---------------------------------------|
| Remove from Network | Press 3 times within 1.5 seconds |
| ZigBee Reset | Press and hold for 5 seconds |

9 ZigBee Reset

In the case where the parent devices (coordinator, gateway, or router) for S05-ST are no longer available or have been reset, S05-ST will need to be reset by applying a 5-second press to the link switch, the green & red LEDs will both come on during the reset, then the green LED should show **Ready to Join** status (flash once every second).

Note: Definition of **Reset** – S05-ST will remain in the parent device network's wireless group list after resetting S05-ST (unless the parent device has been reset).

Recommendation: It is strongly recommended to remove the batteries immediately from S05-ST once it has been reset as this will prevent damage and greatly improve battery life.

10 Product Specifications

| | |
|----------------------|--------------------------------------------|
| Measuring Element | PT1000 temperature sensor |
| Sensing Type | Soil Temperature |
| Sensing Range | -40°C ~120°C |
| Measurement Accuracy | Temperature: ±1°C |
| Addressing | IEEE MAC 64 bit |
| Wireless Protocol | IEEE 802.15.4, ZigBee2007 / PRO HA Profile |
| Transmission Range | Up to 300m (984ft) |



| | | |
|--------------------------------------|---------------------------------------------------------------------------|---------------------------------|
| Operating Frequency | 2.4GHz ISM band | |
| RF Output Power | 18dBm | |
| Receiver Sensitivity | -92dBm | |
| Waterproof Level | IP66 | |
| Power Consumption | TX: 200mA, Sleep: 6μA | |
| Transmit Interval | 1 second to 75 minutes, based on DIP switch setting | |
| Network Topology | Star / Tree / Mesh | |
| Power Supply | DC 6 V 4 x AA alkaline batteries | |
| Operating Environment | -10°C ~45°C/ -14°F ~ 113°F, < 95% relative humidity | |
| Dimensions | 130 (H) x 50 (Φ) mm / 5.1 (H) x 1.9 (Φ) inches | |
| Weight | 140.2g / 4.95oz (excluding batteries) | |
| Certifications | CE / FCC / NCC | |
| Battery Life | > 1 year @ 10-minute transmission interval (depending on battery quality) | |
| Parent Devices (Enabling Devices) | Coordinator | WZB-01USBC / WZB-02485C |
| | Gateway | G07 / WZB-05ET |
| | Router | S05-R / WZB-01USBR / WZB-02485R |
| Interoperability | Sentrol Cloud | |

Thank you for choosing the S05-ST. We are looking forward to working with you!